


Wheel Arch Trims No-drilling INSTALLATION MANUAL

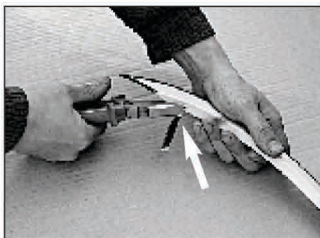


1

Bend the mounting brackets in half and insert into the holes in the trim.



2

Fasten the brackets to the trim, clean the wing and use anti-corrosion agent designated by the need.

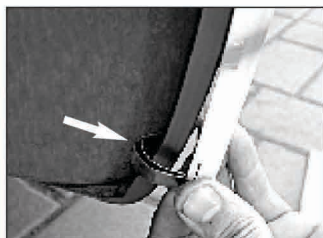

3

Attach the wheel arch trim to the car wing (fender) with one bracket "loose fitting" in the middle of wheel arch.



4

Adjust trim to fits well on the wing from bumper to sill or body side trim.



5

Using pliers clamp tightly locking all mounting brackets.



6

Remove safety foil of the wheel arches trim.

Layout pieces beside the vehicle in installation order. Each trim is marked with a label indicating where it goes.



MADE BY
TOPBODYKIT.CO.UK

Attention: Inspect product for shipping damage and dry fit all pieces to make sure you have the correct fitting kit for your vehicle.

